



ETC Installation Guide

High End Systems Cyberlight LED Light Frost Flag Modification (ETC part number 2597A2061)


1. Disconnect the wires from the motor and sensor

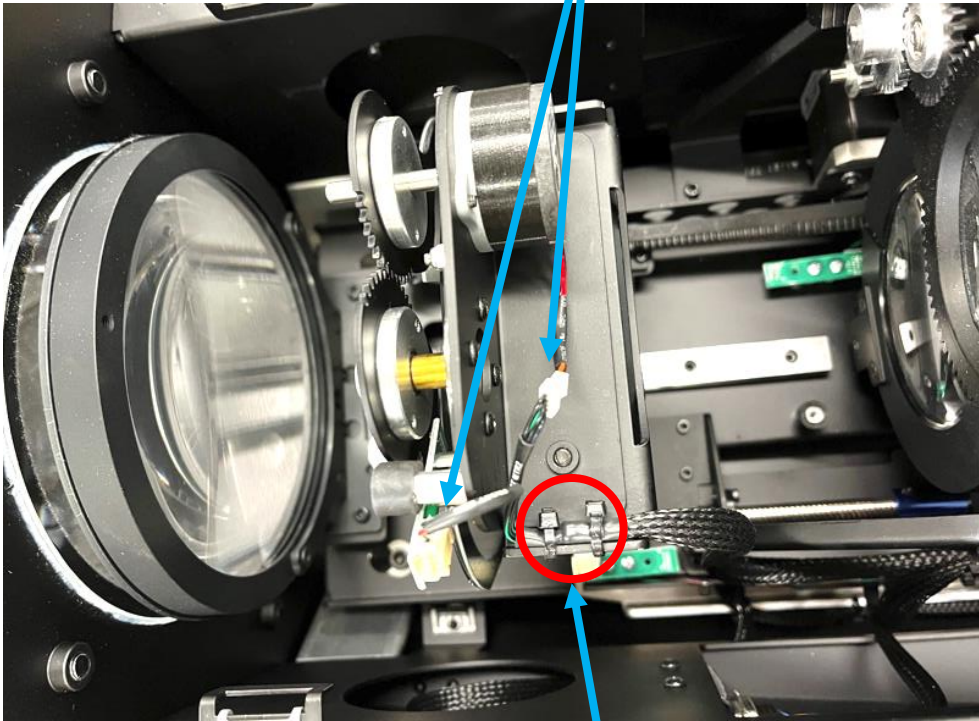


2. Carefully cut the 2 wire harness tie wraps
*replacement tie wraps are included in the kit

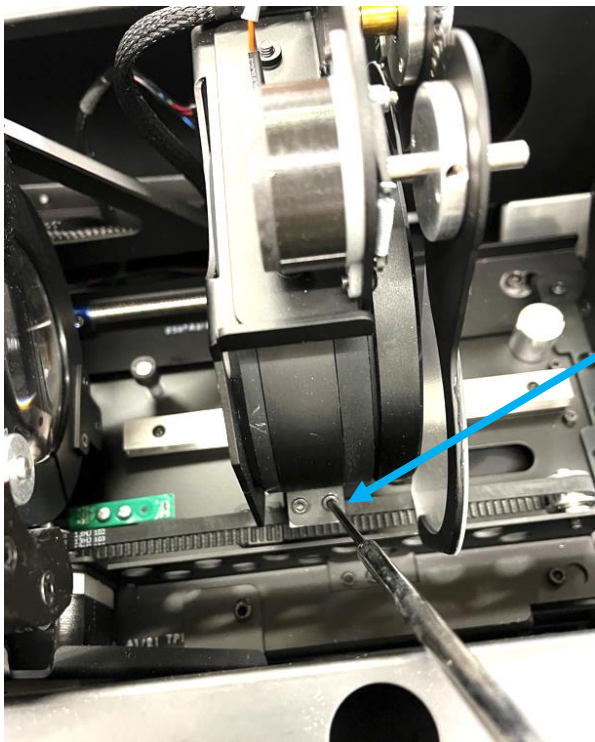


3. Remove 4 screws using a 2.5mm hex tool. There are 2 screws on each side of the zoom lens assembly

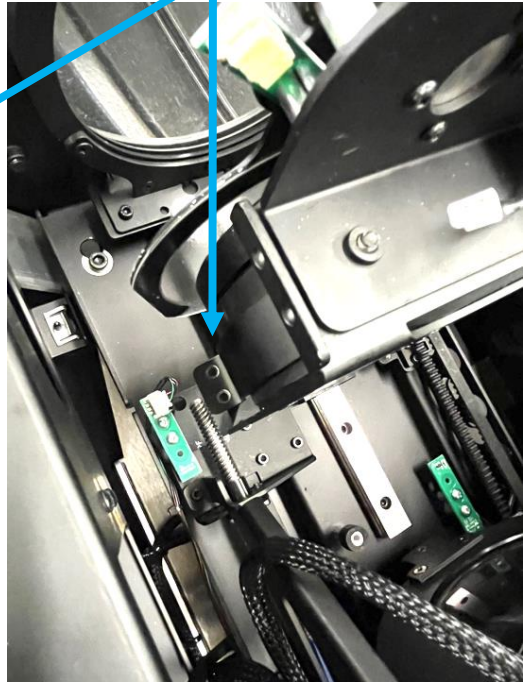

4. Carefully pull the zoom lens assembly toward the rear of the unit to remove it from the zoom rail mount.

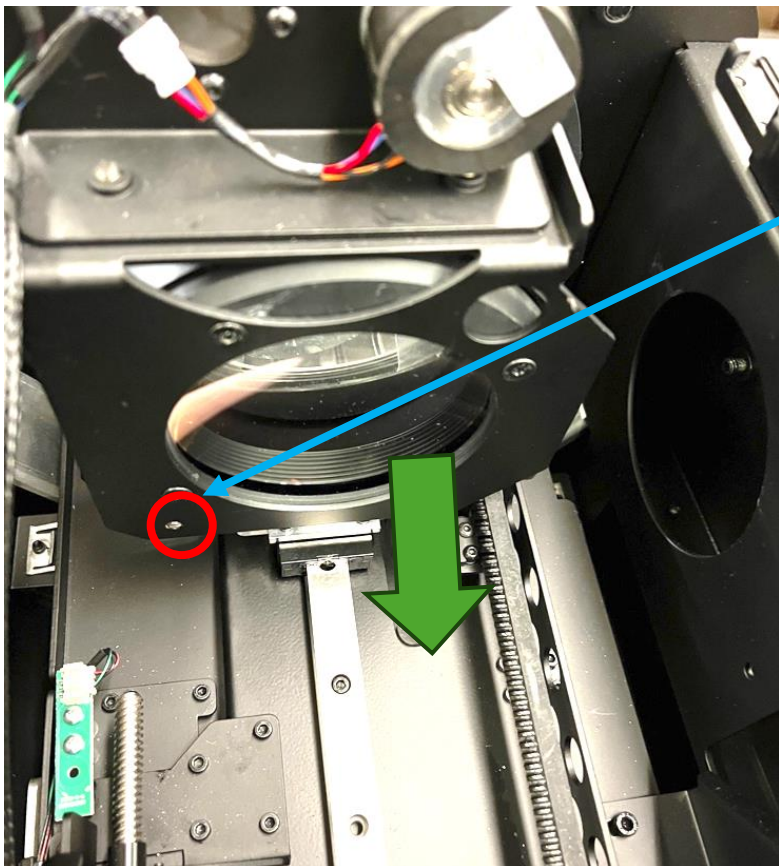


*Take note of the guide pin. This will be used when re-installing the assembly.

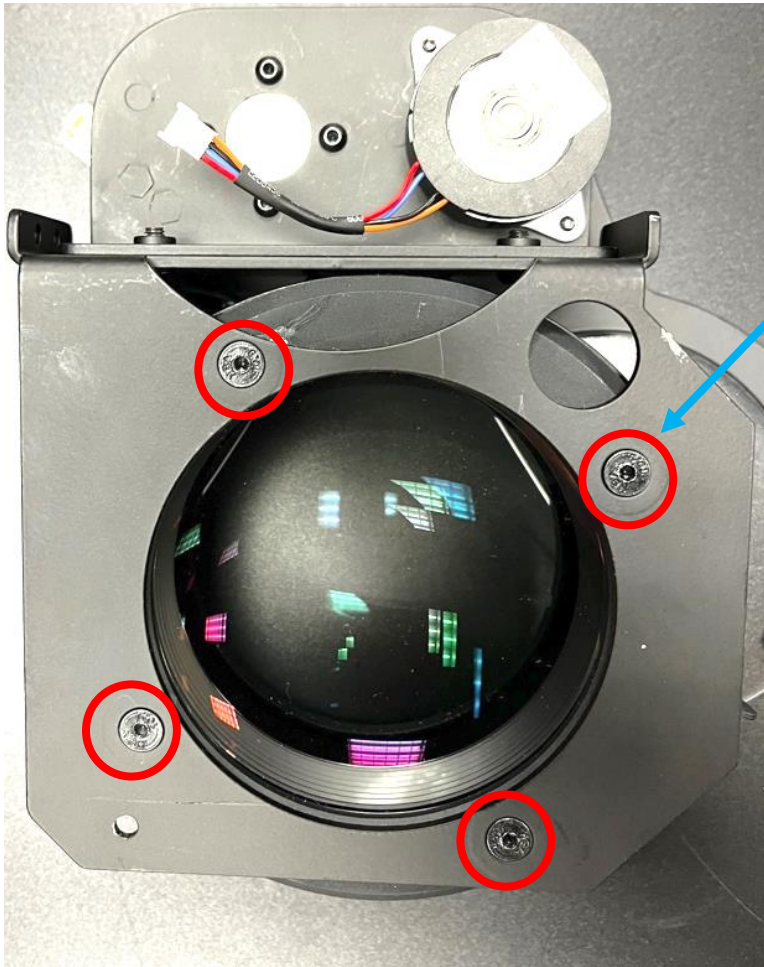

5. Remove the 4 countersunk screws using a 2.5mm hex tool




*Extra screws have been provided in case these strip while removing

6. Carefully separate the zoom lens from the frost flag assembly

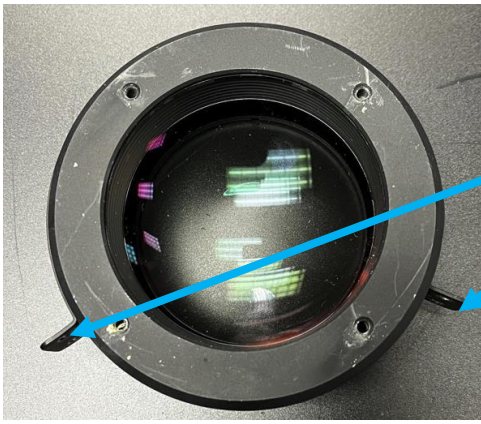

7. Ensure that the lens mounting bracket is at the bottom before continuing

8. Align the 4 screw holes of the frost assembly with the screw holes of the zoom lens

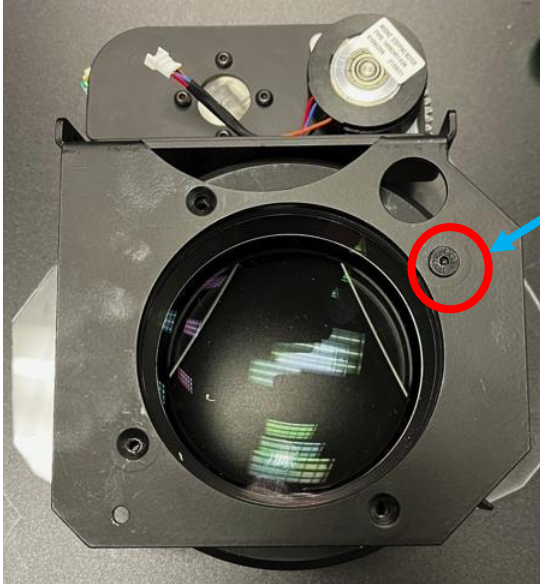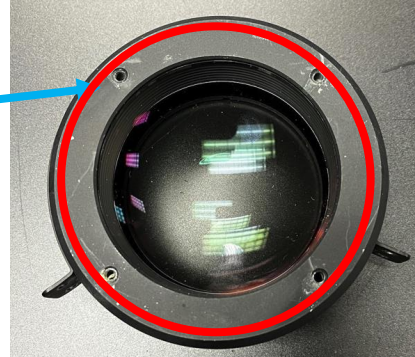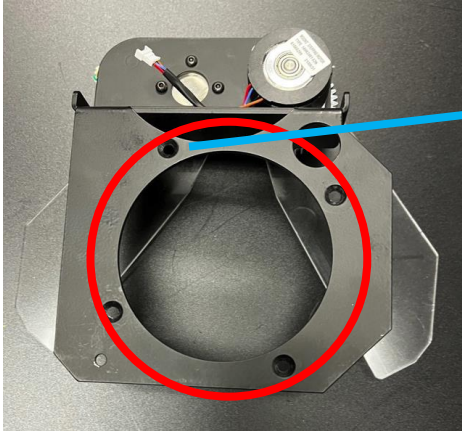

9. Use the provided screws to start threading all 4 before tightening. Tighten all screws using a 2.5mm hex tool.

10. Install the assembly in reverse order of the removal: Follow steps 4, 3, 2, and 1

