

# OBSSESSION II

## Keycap installation instructions

You should have received information with your new console or your software upgrade kit that ETC wants to modify your keyboard slightly. The reason for this hardware modification is that products were shipped out early with some temporary keycaps because certain caps were not yet available. There was no loss in functionality of your system with these temporary keycaps, but the need to replace them does cause some inconvenience to you for which we sincerely apologize. Our decision to ship before these items were available was motivated by our desire to get the latest software with the most modern features into your hands as soon as possible.


Enclosed with this document is a package containing three keycaps and a keycap puller. Two of the keycaps are to replace keycaps already on your keyboard, and a third, labeled "Track Thru", is included to prepare your console for a future upgrade of Obsession II software.

Please install the keycaps on your Obsession II keyboard with reference to the **Installation Procedure** given below and the keyboard layout illustration on the reverse side of this sheet. The illustration identifies only those keycaps that are involved in this installation and shows you where they will be located when you are finished.

## Installation procedure

Follow the steps below to modify with reference to the referring to the layout illustration. When removing keycaps, please use the keycap puller to avoid damage to the console face panel. When installing keycaps, orient the keycap so that the legend reads correctly, then press firmly in place.

1. Switch the power to your Obsession II console **OFF**.
2. Remove and discard the keycaps labeled **Channel/Fixture** and **Focus Group**.
3. Remove and discard the blank keycap where the **Track Thru** keycap is to be installed. See the layout illustration to identify that location.
4. Install the three new keycaps with reference to the layout illustration.

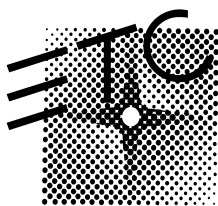

Electronic Theatre Controls

**North America:** 3030 Laura Lane • Middleton, Wisconsin 53562 • USA

Tel: (+1) 608 831 4116 • Fax: (+1) 608 836 1736

**Europe:** 5 Victoria Industrial Estate • Victoria Road • London W3 6UU •

Tel: (+44) 181 896 1000 • Fax: (+44) 181 896 2000

**Asia:** Room 605-606 Tower III, Enterprise Square • 9 Sheung Yuet Road • Kowloon Bay •

Hong Kong • Tel: (+852) 2799 1220 • Fax: (+852) 2799 9325

**Web:** [www.etconnect.com](http://www.etconnect.com) • **Email:** [mail@etconnect.com](mailto:mail@etconnect.com) •

Copyright 1998 • Specifications subject to change • 4152L1009 • Released 10/98

